



### **D)** Attention $\triangle$

- 1. Please read the instruction carefully before use.
- 2. Keep the product away from children.
- 3. Make sure the stands are securely locked.
- 4. Store the product in a cool, dry place.





## **SPK Series**

# **Instruction Manual**



#### A) Features



SPK Series Background Systems provide you with flexibility, stability as well as quality. The systems are supported by stands whose height is adjustable. The smart design makes the systems sturdy while unfolding and putting back the paper. SPK Series uses fine background paper imported from USA and the quality is no doubt very high. Three models, SPK-1, SPK-2 and SPK-3, are available and they allows one, two and three sets of paper background respectively.

#### B) Parts



KIT MODEL	SPK-1	SPK-2	SPK-3
Light Stand (A)	2 PCS	2 PCS	2 PCS
Hook Background Holder (B)	2 PCS	4 PCS	6 PCS
Reel (C+D)	1 SET	2 SETS	3 SETS
Chain (E)	1 PC	2 PCS	3 PCS
Weight (F)	1 PC	2 PCS	3 PCS
Background paper (1.38M x			
11M) (Color selected by	1 ROLL	2 ROLLS	3 ROLLS
customer)			

#### C) Installation

- 1. Unfold the stands (A). Set both stands to the same height (Pic.1).
- 2. Fasten Hook Background Holder (B) on the top of stands (Pic. 2).
- 3. Plug the white side of (C) into an end of the background paper roll. Twist the knob of (C) anti-clockwise. (C) will enlarge and be fixed on the paper roll (Pic. 3).
- 4. Plug the white side of (D) into the other end of the paper roll. Twist the knob of (D) anti-clockwise (Pic. 4).
- 5. Hang the paper roll onto the stands by placing (C) and (D) onto the hooks (Pic. 5).
- 6. Place the chain (E) onto the gear of the reel (D) and weight (F). Join both ends of the chain (E) afterwards (Pic. 6).
- 7. Set-up is complete. Pull the chain downward to either unfold or put away the paper roll (Pic. 7).
- 8. Up to three sets of background paper and reels can be installed, depending on the model (Pic. 8). A gentle force may be needed to pull the paper down since the paper roll is heavy.